



Steps

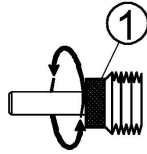


(Picture 1)

1.Ensure to tighten the pin nut ① before using. (see picture 1)
(※ Loosen the pin nut ① for pin replacement)

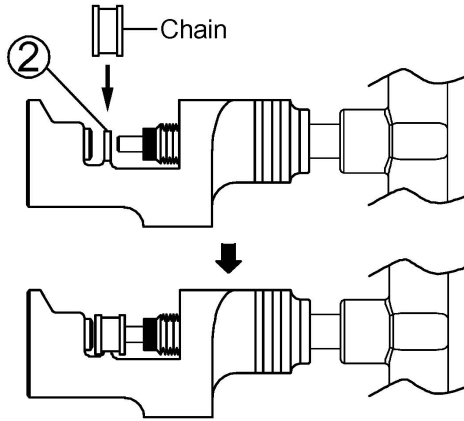

(Picture 2)

2.Place the chain on the cradle ②. (see picture 2)

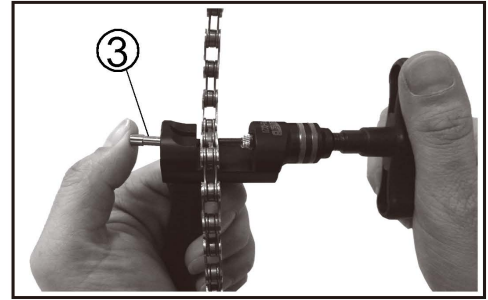


(Picture 3)

3.Put on and push the pin guider ③ as picture then start chain breaking or assembly. (see picture 3)


⚠ TB-CC20 suits for 8 to 10 speed chains
TB-CC40 suits for 1/8 " to 3/16 " BMX
and single speed chains

Steps

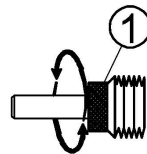


(Picture 1)

1.Ensure to tighten the pin nut ① before using. (see picture 1)
(※ Loosen the pin nut ① for pin replacement)

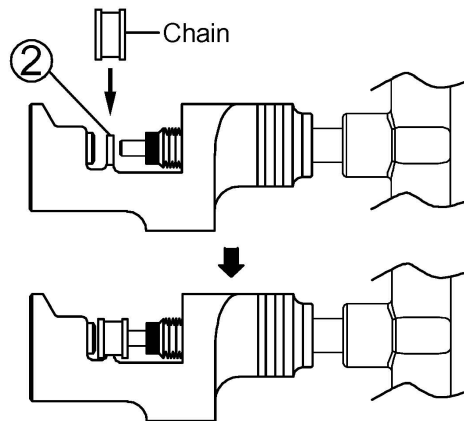

(Picture 2)

2.Place the chain on the cradle ②. (see picture 2)

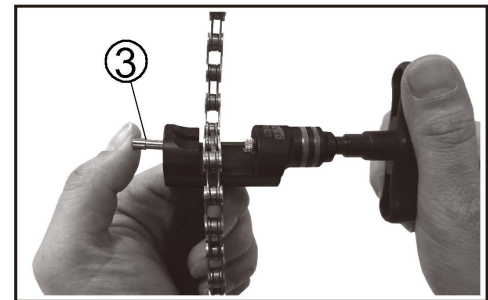

(Picture 3)

3.Put on and push the pin guider ③ as picture then start chain breaking or assembly. (see picture 3)

⚠ TB-CC20 suits for 8 to 10 speed chains
TB-CC40 suits for 1/8 " to 3/16 " BMX
and single speed chains